

# USR803513

## Courier M2M Cellular Gateway

### Quick Start Guide

To begin using the gateway, follow the simple steps in this guide.

1. Attach the included antennas to the antenna connectors on the back of the device.
2. Make sure that a service plan is associated with a SIM card.
3. To install the SIM:
  - Remove the Phillips screw from the cover plate on the front of the unit and remove the plate.
  - Insert the SIM into the SIM slot, oriented as shown in the picture below. The SIM must click into place.
  - Replace the cover plate and the Phillips screw.



**USR®**  
A Division of UNICOM® Global



**USRobotics UK Ltd.**  
The Orangery Turners Hill Rd Crawley  
West Sussex RH10 4SS  
[www.usr.com](http://www.usr.com)

Revision 1.1  
R24.0805.00


4. Power-up the gateway by plugging the provided power supply into the power connector on the back of the gateway, and into a power source. Allow one or two minutes for the gateway to power up.
5. Connect an Ethernet cable to the gateway's LAN port on one end and a computer on the other end.
6. Open a web browser on the computer and enter the address **192.168.10.250** into the address bar.

Note: Some browsers may display a security warning. Accept the warning to open an unencrypted https session.

7. Enter the default username (**admin**) and password (**password**).



After a successful login, the Status page will appear.

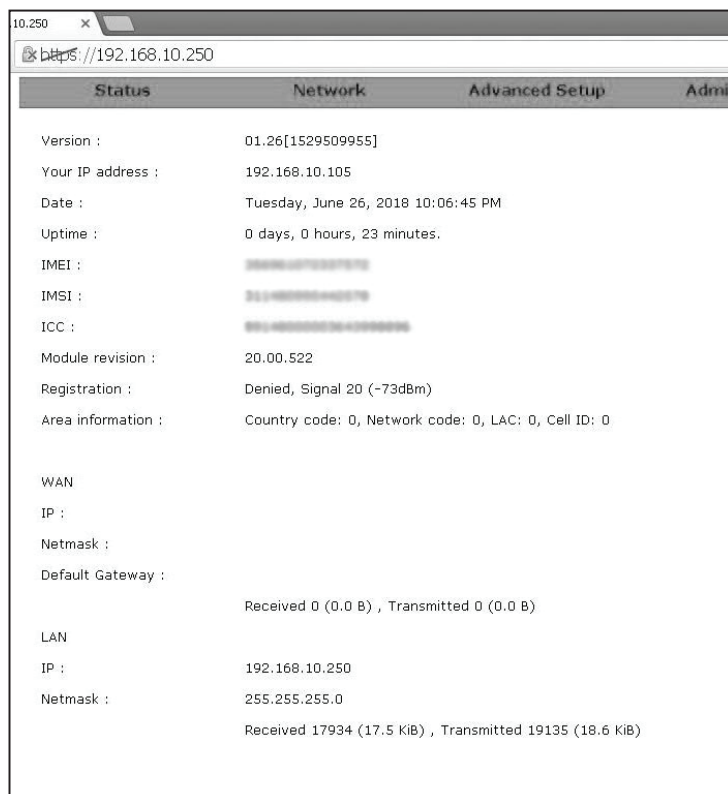


8. Click the **Network** tab on the top menu bar and select **WAN**.

9. On the WAN page, with **Mode** set to **WWAN**, enter the APN (assigned by the cellular service provider) into the **Access Point** field.

10. Enter a username and password if supplied by the cellular service provider.

11. Click **Save**. A confirmation page will appear.

12. Click **OK**. The WAN page will reappear.

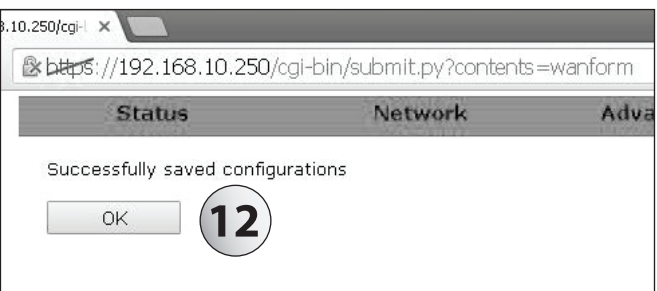

13. Click the **Status** tab on the top menu bar of the WAN page to confirm the connection on the Status page.

A connection to the network will be setup automatically. In a few seconds when the connection is complete, entries will appear in the Registration, Area Information, WAN IP, WAN Netmask, and WAN Default Gateway fields.

The gateway date and time will automatically synchronize to the network clock.

For online documentation and support please visit:

<https://support.usr.com/support/3513>



Hereby, USRobotics declares that this cellular gateway is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address:

<https://support.usr.com/support/3513>

