

PPPOE Users - Read This First

Before you begin – PPPoE connection

This addendum assumes that you have an active and properly functioning cable or DSL Internet service.

Note: DSL users, if you use a login application to access the Internet, you are more than likely using a PPPoE connection. If you are unsure about what type of connection you are using, contact your Internet Service Provider (ISP).

You will be required to gather the following information about your computer from your ISP. To obtain the necessary information, first look within your login application. If you cannot find all the necessary information, contact your ISP for assistance in obtaining this information.

IP Address:	_____ - _____ - _____ - _____
User Name:	_____
Password:	_____
Service Name (optional):	_____
Subnet Mask:	_____ - _____ - _____ - _____
Gateway/Router:	_____ - _____ - _____ - _____
DNS Servers/ Name Servers:	_____ - _____ - _____ - _____ _____ - _____ - _____ - _____

Not all of this information may be required for the installation of the Broadband Router.

After collecting this information and connecting the Broadband Router, launch a Web browser. In the location or address line of your Web browser, type <http://192.168.123.254> to access the Configuration Utility. There is no default password for the Broadband Router, so just click Login. Click Primary Setup and then Change. Select PPP Over Ethernet and click Save. You will then need to enter the information you collected earlier and click Save.

After selecting PPP Over Ethernet as your WAN type, you will see a Connect button in the Note column on the Status page. You can click this button to initiate a session with your ISP.

