USRobotics[®]

Serial ATA 4-Drive NAS



Quick Installation Guide Guide d'installation rapide

Contents

English	5
Installation	
Additional Information	
Français	
Installation	
1119tullution	

Installation

Package Contents

- USR8700 Serial ATA 4-Drive NAS •
- Power Cord
- Ethernet Cable

- Installation CD-ROM
- Quick Installation Guide
- DiskSafe Express recovery CD

Physical Features

Front

The Serial ATA 4-Drive NAS system has the following status LEDs:



Symbol	Name	State	Condition	
小	Power	Off	Not receiving power	
Ö		Solid	Receiving power: normal operation	
		Flashing	Booting or shutting down by power button	
• ~ • •	USB 2.0	Off	USB device not available	
		On	USB device available	
	LAN	Off	Not connected to network	
4	(10/100/1000 Mbps)	Solid	Connected to network	
		Flashing	Transmitting or receiving network data	
	Disk	Off	Drive not available	
0	(1-4)	On	Drive available	
		Flashing	Drive activity	

Back



System Requirements

- Microsoft Windows Vista, Microsoft Windows XP; Microsoft Windows Server 2003; or Microsoft Windows 2000 Professional, Server, or Advanced Server with Service Pack 4
- An HTML 4.01-compliant Web Browser (such as Internet Explorer 5.5 or later or Netscape 8.0 or later) with JavaScript enabled

Installation Instructions

If you bought your Serial ATA 4-Drive NAS with the disks already installed and configured, and you do not want to change your disk configuration, skip step one and proceed with Attaching USB Devices in step two on page 9.

Step One: Determine Your Configuration

Before you start the physical installation of your storage system, decide which configuration is best suited to your needs. The configuration that you choose may affect the order in which you load the disks into your storage system, and you will need to specify your configuration choice when you reach "Step Five: Configure your Storage System".

Each supported configuration has a different balance of desirable characteristics, as shown in the table below. The configurations available to you depend on the number of disks installed in your storage system. Use this table to select your configuration based on the number of disks you intend to use and the characteristics that are of the highest priority to you.

			Configuration Characteristics		tics
Number of Disks	Configuration	Methods Used	Available Capacity*	Data Redundanc Y	Performance
1	Linear	Independent disks	500 GB	No	Good
2	Linear	Independent disks	1.0 TB	No	Good
	RAID o	Striping	1.0 TB	No	High
	RAID 1	Mirroring	500 GB	Yes	Good
3	Linear	Independent disks	1.5 TB	No	Good
	RAID o	Striping	1.5 TB	No	High
	RAID 5	Striping with parity	1.0 TB	Yes	Good
4	Linear	Independent disks	2.0 TB	No	Good
	RAID o	Striping	2.0 TB	No	High
	RAID 5	Striping with parity	1.5 TB	Yes	Good
	RAID 5 with Spare	Striping with parity; spare drive auto- matically rebuilds a failed drive	1.0 TB	Yes	Good
	RAID 10	Striping, Mirroring	1.0 TB	Yes	Good
* Available	e capacity based on	500-GB drives		•	•

For more information about configurations, see the User Guide on the USRobotics Installation CD-ROM.

Step Two: Set up your storage system

Setting up your storage system consists of the following steps:

Installing the Hard Disks Attaching USB Devices Connecting the Storage System to the Network Powering Up the Storage System

Installing the Hard Disks

If you have fewer than four hard disks in your storage system, you might want to add more at this time. You can add disks later, but changing your disk configuration once the disks contain data might cause data loss.

Note: The storage system must have at least one SATA hard disk with a capacity of at least 80 GB.

USRobotics strongly recommends that you install all the hard disks that you want to use in the storage system at this time in order to avoid data loss.

USRobotics also recommends that you use 4 disks of the same size for optimum performance.

To install the hard disks, you need a Phillips head screwdriver.

1. Remove the top hard disk tray from the storage system:

2. Near the front of the tray is a spacer containing four screws. Squeeze the tabs together to remove the spacer from the tray.



3. With the flat edge of the spacer up and the screws facing a flat surface (such as a table or desk top), flex the sides of the spacer apart from each other to release the screws.



4. Make sure that the hard disk is a SATA disk. It should have a SATA connector similar to the following:



5. Slide the new hard disk into the tray (connector end down and toward the back of the tray), and fasten the screws on the sides of the tray:



6. Slide the hard disk and tray back into the storage system until it snaps into place.

If you have fewer than four disks, load the bottom trays first and leave the top tray or trays empty. If you have four disks that are not the same size and you intend to use RAID 10, USRobotics recommends that you load the disks in ascending order of disk capacity, starting with the smallest disk in the bottom slot (slot 1),

Notes:

- If you install a hard disk that was previously part of a RAID, it will rebuild automatically.
- If you later replace all of the disks with higher-capacity disks, you will have to format those disks.

For more information about disk configurations, see the *User Guide* on the USRobotics Installation CD-ROM.

7. Repeat steps 1 through 6 for each disk that you will use in your storage system.

Attaching USB Devices

If you have USB storage devices or printers, you can attach them to the USB ports on the back of the storage system.

Connecting the Storage System to the Network

To connect your storage system to your network, insert one end of the supplied RJ-45 Ethernet cable into the Ethernet port on the back of the storage system. Then insert the other end into a network port.

Powering Up the Storage System

To power up the storage system, insert the power cable into the power connector on the back of the storage system and plug the other end into a power outlet.

Note: USRobotics recommends that you plug the storage system into a surge protector or uninterruptible power supply to prevent damage to the system from power surges.

Once you have connected the power cable, make sure that the power switch on the back of the storage system is set to the on position. Then press and release the power button on the front of the storage system.

The power and Disk LEDs flash while the storage system is booting. Once the system has finished booting, the Disk LEDs stop flashing.

If the hard disk installation was successful, the Disk LED is blue. If there is a problem, the Disk LED is off. If this occurs, shut down the system, remove and inspect the hard disk for any installation problem, and reinstall it. To shut down the system, press and hold the power button for approximately five seconds until the Disk LEDs start flashing. Then release the power button; the storage system will shut down after a short period.

Step Three: Install the Storage System Console

Install the Storage System Console on a computer on the same network as the Serial ATA 4-Drive NAS:

- 1. Insert the USRobotics Installation CD-ROM into your CD-ROM drive.
- 2. If prompted, select your preferred language, then review the License Agreement and click **Yes**.

The installation CD prompts you to make a choice:



3. Select Console Installation.

The installation wizard appears.

4. Follow the on-screen prompts to install the System Console. When installation is complete, the following window appears:



5. Click Finish.

Step Four: Initialize the hard disks

To initialize the hard disks, follow these steps:

- 1. Start the Storage System Console:
 - Windows Vista or XP: click Start > All Programs > Storage System Console.
 - Other Windows operating systems: click **Start > Programs > Storage System Console**.

The **Storage System Console** appears:

🕫 Storage System Consol	le 🔳	
File Tools Help		
Discover Storage Systems	Log On Storage System Manager Map Drive Letter	
Storage Neighborhoo 🖣 🖃	Storage system information	
	Version : fs-usr - 1.0-b106	
	MAC address : 00:14:C1:0A:71:0D	
	IP address : 192.168.2.109	
	Subnet mask : 255.255.255.0	
1 storage server		

In the left pane, click the name of the storage system. Then click Log On Storage System Manager.
 If you see the Login page,

USRobotics [.]	Serial ATA 4-Drive NAS
Lo	ogin to your USR8700 Network Attached Storage
Ent	er your login information.
	User name :
	Log In
and an and the second second second second	and when the second

your storage system was initialized and configured before you bought it. You are finished with the installation procedure and can begin using your Serial ATA 4-Drive NAS system, or you can reconfigure your disks if you choose to do so. Skip the remaining installation steps and proceed with "Log-ging In to the Web User Interface" on page 18.

If the **System Initialization** page appears, you need to initialize your disks:

pdate th ate. You	e software package from fla can also browse for the file	ish or a file to the disks, select Fla: by clicking Browse.	sh or enter the file name and click
u add o	r remove any disks, click So	an before you click Update.	
sks			
Slot	Model	Serial Number	Size
4	ST3160812AS	4LS075CY	149.05 GB
3	ST3160812AS	4LS07PRD	149.05 GB
2	ST3160812AS	4LS07PTF	149.05 GB
1	ST3160812AS	4LS07R3A	149.05 GB
Scan rmware	ystem fimrware version :	fs-usr - 1.0-b106	
.orago s		ID:\Eirmware\fs-usr-1.0-b106.pkg	Browse

If not all the hard disks have been detected, or if you want to add, remove, or reorder the disks at this time, insert or remove the disks one at a time and click **Scan** after each action. If you're adding disks, be sure to wait until the Disk LED is blue before you click **Scan**.

Note: USRobotics strongly recommends that you install all the hard disks that you want to use in the storage system at this time, since changing the number of hard disks later can require disk reconfiguration and possible data loss.

- 3. Click **Browse** and locate the USRobotics Installation CD-ROM.
- 4. Double-click the file inside the **Firmware** folder.
- 5. On the **System Initialization** page, click **Upload**.

The firmware on the storage system's internal flash memory is uploaded to the hard disks.

Flash Writing :	
Please wait until this process is complete. This ma	ay take several minutes.
Extracting the package (49%)	
Writing the kernel (0%) Writing the system (0%)	
	and the second s

When this process is complete, the storage system restarts and displays the welcome page:

USR	8700 Network Attached Storage
are now conr	nected to your storage system.
s wizard will he work settings, ndows compute	Ip you configure your storage system. You will give your system a name, set the date and time, configure your specify the type of disk configuration to use, and indicate how much space to reserve for backups of your local r disks. After you complete this wizard, your storage system will restart automatically. Click Next to get started!

Step Five: Configure your Storage System

Once initial setup has been completed, follow these steps to run the System Setup wizard and perform the necessary initial configuration:

1. On the welcome page, click **Next**.

The End User Software License Agreement page appears.

2. If you agree to the terms, select I accept the license agreement and click Next.

The **Host Name** page appears.

3. Click **Next** to accept the default storage system name (USR8700)

OR

Enter the name that you prefer and then click **Next**.

The storage system name can be up to 15 characters long and can include letters, numbers, and hyphens.

When you click **Next**, the **Date/Time** page appears:

System Setup : Date/Time Please specify the current date and time
Date : 4 🗸 / 25 🗸 / 2006 🗸 (Month / Day / Year)
Time : 11 • : 28 • : 46 • (Hour : Minute : Second)
Time zone : (GMT-05:00) Bogota, Lima, Quito
Back Next

4. Specify the current date, time, and time zone, and then click Next.

Specify the time using the 24-hour format. For example, enter 2:00 P.M. as 14:00:00.

When you click Next, the Network Settings page appears:

If you have a DHCP ser	a DHCP server on your network, this server can get its IP address from that DHCP server automatically. If you don't have rever, you must use the default iP address or sective a different one.
if your net mask.	work uses a different subnet mask, you can change the one shown here, but in most cases you can use the default subnet
0	9 Get an IP address automatically
() Use this IP address:
	IP address : 192 . 168 . 0 . 101
	Subnet mask : 255 , 255 , 0

5. By default, if your network has a DHCP server, the storage system obtains an IP address automatically from that server.

If your network does not have a DHCP server, the default IP address and subnet mask are used. (The default IP address is 192.168.0.101, and the default subnet mask is 255.255.255.0).

To accept the default settings, click Next. Otherwise, specify the desired settings and then click Next.

The **Disk Configuration** page appears. The options that appear on this page vary depending on the number of hard disks that are currently installed in the system.

/stem	Setup : Disk Configuration
ur storage	system can have up to four disks. Four disks have been detected. What kind of disk configuration would you like to use?
۲	Data protection (RAID 5 - three disks minimum) An amount of disk space equal to one disk is used for data protection, and the rest is used for data storage. The data is distributed in such a way that it can be recovered if any one disk fails.
0	Data protection, failover (RAID 5+spare - four disks minimum) Three of the disks provide RAID 5 data protection, and the forth automatically joins the RAID if one of the other three disks fails.
0	Data duplication (RAID 10 - four disks minimum) Half of the disk space is used for data storage, and the other half is used for a duplicate (mirror) of that data. If one disk falls, you have a backup copy.
0	Better performance, no data protection (RAID 0 - two disks minimum) All the disk space is used for data storage.
0	Expandable, no data protection (Linear - one disk minimum) All the disk space is used for data storage, and you can add more disks later without affecting your existing data.
	Back Scan Nevt

6. Select the configuration that you chose from the table on page 7 and click **Next**.

By default, the storage system selects the configuration that provides the best level of data protection available: for a single disk, a linear configuration; for two disks, RAID 1; and for three or four disks, RAID 5.

If you want to change the disk configuration, select the desired RAID level and then click **Next**.

If you want to add or remove hard disks, do so one at a time. For each disk, wait until the Disk LED is blue and click **Scan**. When you are finished adding disks, select your configuration and click **Next**.

When you click **Next**, the **Disks to Back Up** screen appears:

System Setup : Disks to Back Up
In addition to storing and sharing data, your storage system can also act as a backup location for your local Windows computer hard disks. This ensures that you can easily restore local files that have been accidentally deleted, as well as rapidly recover in the event of a system crash or disk failure.
To determine the optimum amount of space to allocate for backups, specify the number of disks that you plan to back up and the size of each one. (Be sure to specify the total capacity, not just the used disk space.)
Clerk Backup and Recovery must be installed and licensed on each computer whose disks you plan to back up. Your storage system includes one license, and you can purchase additional ones. Up to eight computers can be backed up to each storage system, and for each computer you can back up multiple disks.
Number of disks to back up:
Capacity of drives
Back Next

7. In the **Number of disks to back up** list, select the total number of disks that you plan to back up to this storage system. The maximum number of disks you can back up is 25.

If you don't plan to back up any disks, select o, click **Next**, and go to step 10.

If you leave this field blank, 70% of your storage space will be allocated for backups, and 30% will be allocated for shared folders.

If some computers have multiple disks, be sure to select the total number of disks that you plan to back up. For example, if your network has five computers and each computer has two hard disks, you should select 10.

When you select a number, a corresponding number of text boxes (Disk 1, Disk 2, etc.) appear in

Capacity of drives:

In addition to storing disks. This ensures t a system grash or di	up : and sh hat you	Disks to aring data, you can easily rest	D Back Up ur storage syster ore local files that) n can also act as a b it have been accider	ackup k ntally de	ocation for your leted, as well a:	local Windows cor s rapidly recover ir	nputer hard I the event of
To determine the op	timum a	mount of space	e to allocate for b	ackups, specify the	number	of disks that yo	ou plan to back up	and the size
of each one. (Be sur	e to spe	cify the total o	apacity, not just	the used disk space	e.)			
Number of Capacity	ides one l for eau disks to v of driv	i licensé, and y th computer yc back up: 5	ou can purchase u can back up m v	additional ones. Up ultiple disks.	to eight	computers can	be backed up to e	ach storage
Disk 1	:	80	GB	Disk 2		80	GB	
Disk 3	;	80	GB	Disk 4	:	80	GB	
Disk 5	:	120	GB					
							Back	Next

- In each text box, enter the size of each disk that you plan to back up (specify the size in gigabytes).
 To determine the size of a computer's disk, on that computer:
 - Windows Vista: click Windows **Start > Computer** on that computer, right-click the disk, and click **Properties**.
 - Windows 2000: on the desktop, right-click My computer, right-click the disk, and click Properties
 - Other Windows operating systems: click Windows **Start > My Computer** on that computer, rightclick the disk, and click **Properties**.

Be sure to enter the entire capacity of each disk, not just the amount of used disk space.

If a disk is smaller than 1 GB, divide the number of megabytes by 1024. For example, a 512-MB disk would be .5 GB (512 divided by 1024 is .5).

Note: Only 99% of the available storage space can be allocated for backups. If the amount of disk space you need exceeds that limit, you will not be able to back up all the disks.

When you click **Next**, the **Disk Space Distribution** page appears:

System Setup : Disk Space Distribution
Your storage system will be divided into two portions. One portion is for shared folders; the other is for backups of your computer disks.
Based on the number and size of the hard disks that you want to back up, the following proportions are recommended. If you change either percentage, click anywhere on the page to update the other one.
If you reduce the recommended amount of space to use for backups, you might not be able to back up as many disks. In addition, if you want to change this proportion later, you must reconfigure your disks, which will delete all existing data.
The amount of disk space to use for shared folders $:$ 30 $\%$ (134.14 GB)
The amount of disk space to use for backups $:$ 70 % (313 GB)
The amount of disk space : 100 % (447.15 GB)
Back Finish

9. To accept the suggested percentages for file sharing and backup, click Finish.

To change these proportions, enter a new percentage in either text box. (When you click anywhere on the page, the other text box updates automatically so that both percentages add up to 100%.) Then click **Finish**.



If you change these proportions after you finish the wizard, you will lose all data in your shared folders and all existing backups.

Backup of computer disks is provided through a separate backup and recovery utility. You can install DiskSafe Express from the USRobotics Installation CD-ROM for this purpose. For more information about DiskSafe Express, see the *User Guide* on the USRobotics Installation CD-ROM.

10. in the confirmation window, click **OK**.

The **Configuration** page appears and the system is configured according to the settings you specified. Once the configuration is complete, the system restarts

System Setup : Configuration
The system is now being configured. This may take several minutes depending on the disk configuration and the number and size of disks installed.
Please wait until this process is complete. This may take several minutes.
Please wait while the process completes. (0%)

Congratulations. You have successfully completed the installation procedure. Please register your Serial ATA 4-Drive NAS at <u>www.usr.com/productreg/</u>. For regulatory and warranty information, see the *User Guide* on the USRobotics Installation CD-ROM.

Logging In to the Web User Interface

When you complete the installation of your Serial ATA 4-Drive NAS system, the login page is displayed automatically. You can now access the Web User Interface to add users, and create shared folders.

USRobotics' Serial ATA 4-Drive NAS
Login to your
Enter your login information.
User name :
Password :
Log In

For subsequent access to the Web User Interface, start the Storage System Console, select the storage system from the left pane, and click **Log On Storage System Manager**.

Log into the as follows:

- 1. Enter the default user name: **admin**
- 2. Enter the default password: storage
- 3. Click Log In.

For detailed information about using the Web User Interface, see the *User Guide* on the USRobotics Installation CD-ROM.

Additional Information

For regulatory and warranty information, see the User Guide on the USRobotics Installation CD-ROM.

For operation and configuration information, see the *User Guide* on the USRobotics Installation CD-ROM. The User Guide contains detailed information on the use and configuration of your Serial ATA 4-Drive NAS.

For expanded troubleshooting and additional information:

- 1. See the *User Guide* on the USRobotics Installation CD-ROM.
- Go to the Support section of the USRobotics Web site at www.usr.com/support/.

Many of the most common difficulties that customers experience have been addressed in the FAQ and Troubleshooting Web pages for yourSerial ATA 4-Drive NAS. The Support pages also contain information on the latest firmware and may contain documentation updates.

- 3. Submit your technical support question using an online form, or contact the USRobotics Technical Support Department.
- 4. See the Support contact information on the last page of this guide.

Installation

Contenu de la boîte

- USR8700 Serial ATA 4-Drive NAS CD-ROM d'installation •
- Cordon d'alimentation •
- Câble Ethernet •

- Guide d'installation rapide •
- CD-ROM de récupération ٠ DiskSafe Express

Caractéristiques matérielles

Face avant

Le système Serial ATA 4-Drive NAS comporte les voyants de statut suivants :



Symbole	Nom	Etat	Condition
小	Alimentation	Eteint	Hors tension
U		Continu	Sous tension : fonctionnement normal
		Clignotant	Démarrage ou arrêt avec le bouton d'alimentation
• ~ •	USB 2.0	Eteint	Périphérique USB non disponible
		Allumé	Périphérique USB disponible
	LAN (10/100/	Eteint	Pas de connexion au réseau
¥	1000 Mbits/s)	Continu	Connexion au réseau
		Clignotant	Transmission ou réception de données
	Disque (1 à 4)	Eteint	Lecteur non disponible
\square		Allumé	Lecteur disponible
		Clignotant	Lecteur en activité

Face arrière



Configuration requise

- Microsoft Windows Vista, Microsoft Windows XP, Microsoft Windows Server 2003 ou Microsoft Windows 2000 Professional, Server ou Advanced Server with Service Pack 4
- Un navigateur Web compatible HTML 4.01 (tel qu'Internet Explorer 5.5 ou version ultérieure ou Netscape 8.0 ou version ultérieure) avec activation Javascript

Instructions d'installation

Si vous avez acheté votre système Serial ATA 4-Drive NAS avec les disques déjà installés et configurés et si vous ne souhaitez pas modifier la configuration de votre lecteur, passez directement à la section Connexion de périphériques USB de l'étape 2, à la page 23.

Etape 1 : choix de votre configuration

Avant de procéder à l'installation physique de votre système de stockage, choisissez la configuration la mieux adaptée à vos besoins. La configuration que vous choisissez peut avoir un impact sur l'ordre dans lequel vous chargez les disques dans votre système de stockage. Vous devrez également indiquer le type de configuration que vous souhaitez dans « Etape cinq : configuration de votre Système de stockage ».

Chaque configuration prise en charge présente un ensemble de caractéristiques différentes adaptées en fonction des besoins particuliers, tel qu'indiqué dans le tableau ci-après. Les configurations disponibles dépendent du nombre de disques installés sur votre système de stockage. Reportez-vous à ce tableau pour choisir votre configuration en fonction du nombre de disques à utiliser et des caractéristiques qui sont pour vous les plus importantes.

			Caractéristiq	ues de configur	ation
Nombre de disques	Configuration	Méthodes utilisées	Capacité disponible*	Redondance des données	Performances
1	Linéaire	Disques indépendants	500 Go	Non	Bonnes
2	Linéaire	Disques indépendants	1 To	Non	Bonnes
	RAID o	Entrelacement	1 To	Non	Elevées
	RAID 1	Clonage	500 Go	Oui	Bonnes
3	Linéaire	Disques indépendants	1,5 To	Non	Bonnes
	RAID o	Entrelacement	1,5 To	Non	Elevées
	RAID 5	Entrelacement avec parité	1 To	Oui	Bonnes
4	Linéaire	Disques indépendants	2 To	Non	Bonnes
	RAID o	Entrelacement	2 To	Non	Elevées
	RAID 5	Entrelacement avec parité	1,5 To	Oui	Bonnes
	RAID 5 avec lecteur de rechange	Entrelacement avec parité ; le lecteur de rechange reconstitue automatiquement un lecteur défaillant	1 To	Oui	Bonnes
	RAID 10	Entrelacement, clonage	1 To	Oui	Bonnes

* Capacité disponible en fonction des disques de 500 Go

Pour en savoir plus sur les configurations, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

Etape 2 : configuration de votre système de stockage

La configuration de votre système de stockage comporte les étapes suivantes :

- Installation des disques durs
- Connexion de périphériques USB
- Connexion du Système de stockage au réseau
- Mise sous tension du Système de stockage

Installation des disques durs

Si votre système de stockage est équipé de moins de 4 disques durs, vous pouvez en ajouter d'autres à cette étape. Vous pouvez également le faire ultérieurement, mais sachez que la modification de la configuration de disques non vierges peut entraîner une perte de données.

Remarque : le système de stockage doit comporter au moins un disque dur SATA offrant une capacité minimale de 80 Go.

USRobotics recommande vivement d'installer tous les disques durs à utiliser dans le système de stockage lors de cette étape afin d'éviter toute perte de données.

USRobotics conseille également d'utiliser 4 disques de même capacité pour des performances optimales.

Pour installer les disques durs, vous devez utiliser un tournevis à tête Phillips.

1. Retirez le tiroir de disque dur supérieur du système de stockage.

2. Une entretoise contenant 4 vis se trouve près de la face avant du tiroir. Appuyez sur toutes les languettes pour retirer l'entretoise du tiroir.



3. Avec l'extrémité plate de l'entretoise orientée vers le haut et les vis face à une surface plate (une table ou le dessus d'un bureau, par exemple), pliez les côtés de l'entretoise pour desserrer les vis.



4. Assurez-vous que le disque dur est un disque SATA. Il doit disposer d'un connecteur SATA similaire à celui-ci :



5. Faites glisser le nouveau disque dur dans le tiroir (extrémité du connecteur vers le bas à l'arrière du tiroir), puis serrez les vis de chaque côté du tiroir :



6. Replacez le disque dur et son tiroir dans le système de stockage jusqu'à ce qu'ils s'emboîtent parfaitement.

Si vous avez moins de quatre disques, commencez par remplir les tiroirs inférieurs et laissez les tiroirs supérieurs vides.

Si vous disposez de quatre disques de tailles différentes et que vous avez l'intention d'utiliser RAID 10, USRobotics vous conseille de charger les disques par ordre ascendant en fonction de leur capacité ; insérez le disque de plus faible capacité dans le tiroir le plus bas (tiroir 1).

Remarques :

- Si vous installez un disque dur qui faisait partie intégrante d'un RAID, il se restructurera automatiquement.
- Si, par la suite, vous remplacez tous les disques par des disques de capacité plus importante, vous devrez les formater.

Pour en savoir plus sur la configuration de disques, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

 Reprenez les étapes 1 à 6 pour tous les disques que vous allez utiliser dans votre système de stockage.

Connexion de périphériques USB

Si vous disposez de périphériques de stockage ou d'impression USB, vous pouvez les brancher sur les ports USB situés à l'arrière du système de stockage.

Connexion du Système de stockage au réseau

Pour connecter votre système de stockage au réseau, insérez l'une des extrémités du câble Ethernet RJ-45 fourni dans le port Ethernet situé à l'arrière du système de stockage. Insérez ensuite l'autre extrémité dans un port réseau.

Mise sous tension du Système de stockage

Pour mettre le système de stockage sous tension, insérez le câble d'alimentation dans la prise prévue à cet effet à l'arrière du système de stockage et branchez l'autre extrémité dans une prise murale.

Remarque : USRobotics vous conseille de brancher le système de stockage à un dispositif de protection contre les surtensions ou à une source d'alimentation ininterrompue afin d'éviter d'endommager le système.

Lorsque vous avez branché le câble d'alimentation, vérifiez que l'interrupteur à l'arrière du système de stockage est bien en position de marche. Appuyez ensuite brièvement sur le bouton d'alimentation situé à l'avant du système de stockage.

Les voyants DEL d'alimentation et de disque clignotent lors de l'initialisation du système de stockage. Lorsque l'initialisation du système est terminée, les voyants DEL de disque ne clignotent plus.

Si l'installation du disque dur s'est déroulée correctement, le voyant DEL du disque est bleu. En cas de problème, le voyant DEL du disque reste éteint. Si cela se produit, éteignez le système, enlevez et inspectez le disque dur afin de trouver l'origine du problème d'installation, puis réinstallez-le. Pour éteindre le système, appuyez sur le bouton d'alimentation et maintenez-le enfoncé pendant cinq secondes environ jusqu'à ce que les voyants DEL du disque commencent à clignoter. Relâchez ensuite le bouton d'alimentation ; le système de stockage s'éteint quelques instants plus tard.

Etape trois : installation de la console du Système de stockage

Installez la console du système de stockage sur un ordinateur relié au même réseau que le Serial ATA 4-Drive NAS :

1. Insérez le CD-ROM d'installation USRobotics dans votre lecteur de CD-ROM.

2. Sélectionnez votre langue, le cas échéant, lisez l'accord de licence, puis cliquez sur **Yes** (Oui). Le CD d'installation vous demande de faire un choix.



3. Sélectionnez **Console Installation** (Installation de la console).

L'assistant d'installation s'affiche.

4. Suivez les instructions à l'écran pour installer la console du système. Lorsque l'installation est terminée, la fenêtre suivante s'affiche :

InstallShield Wizard	
InstallShield Wizard	InstallShield Wizard Complete Setup has finished installing Storage System Console on your computer.
	< Back Finish Cancel

5. Cliquez sur **Finish** (Terminer).

Etape quatre : initialisation des disques durs

Pour initialiser les disques durs, suivez les étapes ci-dessous :

- 1. Lancez la console du système de stockage :
 - Windows Vista ou XP : cliquez sur **Démarrer > Tous les programmes > Storage System Console**.
 - Les autres systèmes d'exploitation Windows : cliquez sur **Démarrer > Programmes > Storage** System Console.

La fenêtre Storage System Console (Console du système de stockage) s'affiche :

🕫 Storage System Consol	le 🚺 🚺	×
File Tools Help		
Discover Storage Systems	Log On Storage System Manager Map Drive Letter	
Storage Neighborhood کی۔ 🖃	d Storage system information	h
œ⊶ ,⊒, USR8700	Version : fs-usr - 1.0-b106	
	MAC address : 00:14:C1:0A:71:0D	
	IP address : 192.168.2.109	
	Subnet mask : 255.255.255.0	
		1
1 storage server		

2. Dans le panneau de gauche, cliquez sur le nom du système de stockage. Cliquez ensuite sur **Log On Storage System Manager** (Connexion au gestionnaire du système de stockage).

Si la page de connexion s'affiche,

USRobotics' SERIAL ATA 4-DRIVE NAS	
Login to your USR8700 Network Atta	ched Storage
Enter your login information.	
User name : Password :	
Log In	
and a second and a second and a second s	

votre système de stockage a été initialisé et configuré avant que vous ne l'achetiez. La procédure d'installation est désormais terminée et vous pouvez commencer à utiliser votre système Serial ATA 4-Drive NAS, ou vous pouvez reconfigurer vos disques si vous le souhaitez. Ignorez les étapes d'installation restantes et passez à « Connexion à l'Interface utilisateur Web », page 32.

Si la page **System Initialization** (Initialisation du système) s'affiche, vous devez initialiser vos

disques :

u add c			
0 000 0	r remove any disks, click S	can before you click Update.	
sks			
Slot	Model	Serial Number	Size
1	ST3160812AS	4LS075CY	149.05 GB
3	ST3160812AS	4LS07PRD	149.05 GB
2	ST3160812AS	4LS07PTF	149.05 GB
	ST3160812AS	4LS07R3A	149.05 GB
Scan mware	xstern fimrware version	fs-usr - 1.0-b106	
orage s	gotorin minimare recording i		

Si certains de vos disques durs n'ont pas été détectés, ou si vous souhaitez ajouter, supprimer, ou réorganiser les disques, insérez ou retirez les disques séparément, puis cliquez sur **Scan** (Rechercher) après chaque action. Si vous ajoutez des disques, attendez que le voyant DEL du disque devienne bleu avant de cliquer sur **Scan** (Rechercher).

Remarque : USRobotics vous conseille fortement d'installer tous les disques durs que vous souhaitez utiliser dans le système de stockage, car modifier le nombre de disques durs plus tard vous oblige à les reconfigurer et peut entraîner la perte de vos données.

- 3. Cliquez sur Browse (Parcourir) et recherchez le CD-ROM d'installation USRobotics.
- 4. Double-cliquez sur le fichier qui se trouve dans le dossier **Firmware** (Microcode).
- 5. Sur la page **System Initialization** (Initialisation du système), cliquez sur **Upload** (Téléchargement).

Le microcode de la mémoire flash interne du système de stockage est téléchargé sur les disques durs.

Flash Writing :	
Please wait until this process is complete.	This may take several minutes.

Au terme du processus, le système de stockage redémarre et la page d'accueil s'affiche :



Etape cinq : configuration de votre Système de stockage

Une fois que l'installation initiale est terminée, suivez ces étapes pour exécuter l'assistant d'installation du système et procéder à la configuration initiale nécessaire :

1. Sur la page d'accueil, cliquez sur **Next** (Suivant).

La page **End User Software License Agreement** (Accord de licence du logiciel pour utilisateur final) s'affiche.

2. Si vous acceptez les termes de l'accord, sélectionnez l accept the license agreement (J'accepte l'accord de licence) et cliquez sur Next (Suivant).

La page Host Name (Nom de l'hôte) s'affiche.

3. Cliquez sur Next (Suivant) pour accepter le nom du système de stockage par défaut (USR8700)

OU

Saisissez le nom de votre choix, puis cliquez sur **Next** (Suivant).

Le nom du système de stockage peut contenir jusqu'a 15 caractères, dont des lettres, des chiffres et des tirets.

Lorsque vous cliquez sur Next (Suivant), la page Date/Time (Date/Heure) s'affiche :

System Setup : Date/Time Please specify the current date and time
Date : 4 v / 25 v / 2006 v (Month / Day / Year)
Time : 11 v : [46 v] (Hour : Minute : Second) Time zone : (GMT-05:00) Bogota, Lima, Quito v
Back Next

Indiquez la date, l'heure et le fuseau horaire, puis cliquez sur Next (Suivant).
 Indiquez l'heure en utilisant le format 24 heures. Par exemple, 2:00 P.M. correspond à 14:00:00.

Lorsque vous cliquez sur Next (Suivant), la page Network Settings (Paramètres réseau) s'affiche :

System Setup - Network Settings
The server of voir network, this server can get its IP address from that DHCP server automatically. If you don't have
a DHCP server, you must use the default IP address or specify a different one.
If your network uses a different subnet mask, you can change the one shown here, but in most cases you can use the default subnet mask.
• Get an IP address automatically
O Use this IP address:
IP address : 192 . 168 . 0 . 101
Subnet mask : [255], [255], [255], [0]
Back Next

5. Par défaut, si votre réseau utilise un serveur DHCP, ce dernier attribue une adresse IP automatiquement au système de stockage.

Si votre réseau n'utilise pas de serveur DHCP, l'adresse IP et le masque de sous-réseau par défaut sont utilisés (l'adresse IP par défaut est 192.168.0.101, et le masque de sous-réseau par défaut est 255.255.255.0).

Pour accepter les paramètres par défaut, cliquez sur **Next** (Suivant). Sinon, indiquez les paramètres souhaités, puis cliquez sur **Next** (Suivant).

La page **Disk Configuration** (Configuration de disque) s'affiche. Les options proposées sur cette page varient en fonction du nombre de disques durs actuellement installés sur le système.

'our storage	system can have up to four disks. Four disks have been detected. What kind of disk configuration would you like to use?
۲	Data protection (RAID 5 - three disks minimum) An amount of disk space equal to one disk is used for data protection, and the rest is used for data storage. The data is distributed in such a way that it can be recovered if any one disk fails.
0	Data protection, failover (RAID 5+spare - four disks minimum) Three of the disks provide RAID 5 data protection, and the forth automatically joins the RAID if one of the other three disks fails.
0	Data duplication (RAID 10 - four disks minimum) Half of the disk space is used for data storage, and the other half is used for a duplicate (mirror) of that data. If one disk fails, you have a backup copy.
0	Better performance, no data protection (RAID 0 - two disks minimum) All the disk space is used for data storage.
0	Expandable, no data protection (Linear - one disk minimum) All the disk space is used for data storage, and you can add more disks later without affecting your existing data.
	Back Scan Next

6. Sélectionnez la configuration que vous avez choisie dans le tableau de la page 21, puis cliquez sur **Next** (Suivant).

Par défaut, le système de stockage sélectionne la configuration qui fournit le meilleur niveau de protection des données disponible : pour un seul disque, une configuration linéaire ; pour deux disques, RAID 1 ; et pour trois ou quatre disques, RAID 5.

Si vous souhaitez modifier la configuration de disque, sélectionnez le niveau de protection RAID souhaité, puis cliquez sur **Next** (Suivant).

Si vous souhaitez ajouter ou retirer des disques durs, veuillez procéder unité par unité. Pour chaque disque, attendez que le voyant DEL du disque devienne bleu, puis cliquez sur **Scan** (Rechercher). Lorsque vous avez fini d'ajouter des disques, sélectionnez votre configuration, puis cliquez sur **Next** (Suivant).

Lorsque vous cliquez sur Next (Suivant), la page Disks to Back Up (Disques à sauvegarder) s'affiche :

System Setup : Disks to Back Up
In addition to storing and sharing data, your storage system can also act as a backup location for your local Windows computer hard disks. This ensures that you can easily restore local files that have been accidentally deleted, as well as rapidly recover in the event of a system crash or disk failure.
To determine the optimum amount of space to allocate for backups, specify the number of disks that you plan to back up and the size of each one. (Be sure to specify the total capacity, not just the used disk space.)
Client Backup and Recovery must be installed and licensed on each computer whose disks you plan to back up. Your storage system includes one license, and you can purchase additional ones. Up to eight computers can be backed up to each storage system, and for each computer you can back up multiple disks.
Number of disks to back up:
Capacity of drives
Back Next

7. Dans la liste Number of disks to back up (Nombre de disques à sauvegarder), sélectionnez le nombre total de disques que vous prévoyez de sauvegarder sur ce système de stockage. Vous pouvez sauvegarder jusqu'a 25 disques maximum.

Si vous ne prévoyez pas de sauvegarder de disque, sélectionnez o, cliquez sur **Next** (Suivant), puis passez à l'étape 10.

Si vous laissez ce champ vide, 70 % de votre capacité de stockage seront attribués aux sauvegardes et 30 % seront attribués aux dossiers partagés.

Si certains ordinateurs ont plusieurs disques, sélectionnez le nombre total de disques que vous prévoyez de sauvegarder. Par exemple, si votre réseau comprend cinq ordinateurs et que chaque ordinateur dispose de deux disques durs, vous devez indiquer 10.

Lorsque vous choisissez un nombre, le nombre correspondant de champs (Disk 1, Disk 2, etc.)

apparaît dans la section **Capacity of drives** (capacité de disques) :

In addition to stor disks. This ensure: a system crash or	stup : ing and sh that you disk failur	aring data, yo can easily rest e.	D Back Up ur storage system ore local files that) n can also act as a t t have been accide	packup le ntally de	ocation for you leted, as well	ur local Windows co as rapidly recover	mputer hard in the event of
To determine the of each one. (Be s	optimum a ure to sp	mount of space ecify the total of	e to allocate for b apacity, not just	ackups, specify the the used disk space	e number e.)	of disks that	you plan to back u	p and the size
Client Bac system in system, a	kup and F cludes on nd for ea	Recovery must e license, and y ch computer yo	be installed and li ou can purchase u can back up mu	censed on each cor additional ones. Up ultiple disks.	nputer v o to eigh	vhose disks yo : computers ca	u plan to back up. an be backed up to	Your storage each storage
Capac	ity of driv	res	_					
Disk 1	:	80	GB	Disk 2	1	80	GB	
Disk 3	:	80	GB	Disk 4	:	80	GB	
Disk 5	;	120	GB					

8. Dans chaque champ, saisissez la taille de chaque disque que vous prévoyez de sauvegarder (indiquez la taille en gigaoctets).

Pour connaître la taille du disque d'un ordinateur :

- Windows Vista : cliquez sur **Démarrer > Ordinateur**, effectuez un clic droit sur l'icône du disque dur, puis cliquez sur **Propriétés**.
- Windows 2000 : à partir du bureau, double-cliquez sur **Poste de travail** effectuez un clic droit sur l'icône du disque dur, puis cliquez sur **Propriétés**.
- Windows Vista : cliquez sur **Démarrer > Poste de travail**, effectuez un clic droit sur l'icône du disque dur, puis cliquez sur **Propriétés**.

Assurez-vous de bien saisir la capacité totale de chaque disque, pas simplement le volume d'espace disque utilisé.

Si la taille d'un disque est inférieure à 1 Go, divisez le nombre de mégaoctets par 1 024. Par exemple, un disque de 512 Mo correspond à 0,5 Go.

Remarque : Seulement 99 % de la capacité de stockage disponible peut être attribuée aux sauvegardes. Si le volume d'espace disque dépasse cette limite, vous ne pourrez pas sauvegarder tous les disques.

Lorsque vous cliquez sur Next (Suivant), la page Disk Space Distribution (Distribution de l'espace

disque) s'affiche :

assed on the number and size of the hard disks that you want to back up, the following proportions are recommended. If you change ther percentage, click anywhere on the page to update the other one. If you reduce the recommended amount of space to use for backups, you might not be able to back up as many disks. In addition, if you want to change this proportion later, you must reconfigure your disks, which will delete all existing data. The amount of disk space to use for shared folders : 30 % (134.14 GB) The amount of disk space to use for backups : 70 % (313 GB)	our storage system will be divided into two portions. One p sks.	ortion is for shared folders; the other is for backups of your computer
If you reduce the recommended amount of space to use for backups, you might not be able to back up as many disks. In addition, if you want to change this proportion later, you must reconfigure your disks, which will delete all existing data. The amount of disk space to use for shared folders : 30 % (134.14 GB) The amount of disk space to use for backups : 70 % (313 GB)	ased on the number and size of the hard disks that you wa ther percentage, click anywhere on the page to update th	nt to back up, the following proportions are recommended. If you change e other one.
The amount of disk space to use for shared folders : $\boxed{30}$ % (134.14 GB) The amount of disk space to use for backups : $\boxed{70}$ % (313 GB)	If you reduce the recommended amount of space to addition, if you want to change this proportion later	o use for backups, you might not be able to back up as many disks. In , you must reconfigure your disks, which will delete all existing data.
The amount of disk space to use for backups $\qquad : \boxed{70}$ % (313 GB)	The amount of disk space to use for shared folders	: 30 % (134.14 GB)
	The amount of disk space to use for backups	: 70 % (313 GB)
The amount of disk space : 100 $\%$ (447.15 GB)	The amount of disk space	: 100 % (447.15 GB)

9. Pour accepter les pourcentages proposés pour le partage de fichiers et les sauvegardes, cliquez sur **Finish** (Terminer).

Pour modifier ces proportions, saisissez un nouveau pourcentage dans l'un des champs (lorsque vous cliquez n'importe où sur cette page, l'autre champ se met à jour automatiquement pour que le total des deux pourcentages corresponde à 100 %). Cliquez ensuite sur **Finish** (Terminer).



Si vous modifiez ces proportions après la fin de l'assistant, vous perdrez toutes les données se trouvant dans vos dossiers partagés et toutes les sauvegardes existantes.

La sauvegarde des disques d'ordinateurs est rendue possible grâce à un utilitaire de sauvegarde et de restauration différent. Pour ce faire, vous pouvez installer DiskSafe Express à partir du CD-ROM d'installation USRobotics. Pour en savoir plus sur DiskSafe Express, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

10. Sur la page de confirmation, cliquez sur **OK**.

La page **Configuration** s'affiche et le système est configuré en fonction des paramètres que vous avez indiqués. Une fois que vous avez fini de modifier la configuration, le système redémarre.

The cuch		
disks inst	tem is now being configured. This may take several minutes d talled.	epending on the disk configuration and the number and size of
Please w	vait until this process is complete. This may take several minut	ies.

Félicitations ! L'installation a réussi. Veuillez enregistrer votre Serial ATA 4-Drive NAS à l'adresse

<u>www.usr.com/productreg/</u>. Pour obtenir plus d'informations sur les mentions légales et la garantie, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

Connexion à l'Interface utilisateur Web

Une fois que vous avez terminé l'installation de votre système Serial ATA 4-Drive NAS, la page de connexion s'affiche automatiquement. Vous pouvez à présent accéder à l'Interface utilisateur Web pour ajouter des utilisateurs et créer des dossiers partagés.

USRobotics' SERIAL ATA	4-Drive NAS
Login to your USR870	0 Network Attached Storage
Enter your login informal	ion.
User name : Password :	
	Log In

Pour accéder par la suite à l'Interface utilisateur Web, ouvrez le Storage System Console (Console du système de stockage), sélectionnez le système de stockage sur le panneau de gauche, puis cliquez sur **Log On Storage System Manager** (Connexion du gestionnaire de système de stockage).

Connectez-vous en procédant comme suit :

- 1. Saisissez le nom d'utilisateur par défaut : admin
- 2. Saisissez le mot de passe par défaut : storage
- 3. Cliquer sur **Log In** (Connexion).

Pour obtenir des informations détaillées sur l'utilisation de l'Interface utilisateur Web , reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

Informations complémentaires

Pour obtenir plus d'informations sur les mentions légales et la garantie, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.

Pour obtenir plus d'informations sur le fonctionnement et la configuration, reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics. Le Guide de l'utilisateur contient des informations détaillées sur l'utilisation et la configuration de votre Serial ATA 4-Drive NAS.

Pour obtenir des informations complètes sur le dépannage et des précisions supplémentaires :

- 1. Reportez-vous au *Guide de l'utilisateur* sur le CD-ROM d'installation d'USRobotics.
- 2. Accédez à la section Support du site Web d'USRobotics à l'adresse : <u>www.usr.com/support/</u>. Vous trouverez des réponses à la plupart des problèmes rencontrés par les clients dans les pages Web FAQ et Dépannage consacrées à votre Serial ATA 4-Drive NAS. Les pages d'assistance contiennent également des informations sur les microcodes les plus récents et les mises à jour de documentation.
- 3. Posez votre question à l'assistance technique à l'aide du formulaire en ligne ou contactez le service d'assistance technique d'USRobotics.
- 4. Consultez les coordonnées de l'assistance technique, indiquées en dernière page de ce guide.



Support / Assistance / Servizio assistenza / Asistencia técnica / Ondersteuning / Destek

1. <u>www.usr.com/support/</u>

2.

	\square	6
United States	www.usr.com/emailsupport	(888) 216-2850
Canada	www.usr.com/emailsupport	(888) 216-2850
Austria / Österreich / Ausztria	www.usr.com/emailsupport/de	07110 900 116
Belgium / België	www.usr.com/emailsupport/nl	070 23 35 45
Belgium/ Belgique	www.usr.com/emailsupport/be	070 23 35 46
Czech Republic / Česká republika	www.usr.com/emailsupport/cz	
Denmark	www.usr.com/emailsupport/ea	38323011
Finland	www.usr.com/emailsupport/ea	08 0091 3100
France	www.usr.com/emailsupport/fr	0825 070 693
Germany / Deutschland	www.usr.com/emailsupport/de	0180 567 1548
Greece / Ελλάδα	www.usr.com/emailsupport/gr	
Hungary / Magyarország	www.usr.com/emailsupport/hu	0180 567 1548
Ireland	www.usr.com/emailsupport/uk	1890 252 130
Italy / Italia	www.usr.com/emailsupport/it	800 979 266
Luxembourg / Luxemburg	www.usr.com/emailsupport/be	342 080 8318
Middle East/Africa	www.usr.com/emailsupport/me	+ 44 870 844 4546
Netherlands / Nederland	www.usr.com/emailsupport/nl	0900 202 5857
Norway	www.usr.com/emailsupport/ea	23 16 22 37
Poland / Polska	www.usr.com/emailsupport/pl	
Portugal	www.usr.com/emailsupport/pt	21 415 4034
Russia / Россия	www.usr.com/emailsupport/ru	8 800 200 20 01
Spain / España	www.usr.com/emailsupport/es	902 117964
Sweden / Sverige	www.usr.com/emailsupport/se	08 5016 3205
Switzerland / Schweiz / Suisse /Svizzera	www.usr.com/emailsupport/de	0848 840 200
Turkey / Türkiye	www.usr.com/emailsupport/tk	0212 444 4 877
United Arab Emirates	www.usr.com/emailsupport/me	0800 877 63
United Kingdom	www.usr.com/emailsupport/uk	0870 844 4546

Model Number	Serial Number
8700	

Printed in Xxxx