



---

## DIP Switch Settings for the Sportster Modem

---

- 1 UP     DATA TERMINAL READY NORMAL  
   DOWN DTR OVERRIDE
  
- 2 UP     VERBAL RESULT CODES  
   DOWN NUMERIC RESULT CODES
  
- 3 UP     SUPPRESS RESULT CODES  
   DOWN DISPLAY RESULT CODES
  
- 4 UP     ECHO OFF LINE COMMANDS  
   DOWN NO ECHO, OFFLINE COMMANDS
  
- 5 UP     AUTO ANSWER ON RING  
   DOWN SUPPRESS AUTO ANSWER
  
- 6 UP     CARRIER DETECT NORMAL  
   DOWN CARRIER DETECT OVERRIDE
  
- 7 UP     LOAD NVRAM DEFAULTS  
   DOWN LOAD FACTORY DEFAULTS
  
- 8 UP     DUMB MODE  
   DOWN SMART MODE

FACTORY DEFAULT SETTINGS FOR THE SPORTSTER MODEM IS 3,5 AND 8 DOWN, ALL THE REST UP.