

USRobotics®

USB Internet Mini Phone



Quick Installation Guide

R24.0694.00
rev 0.2 3/07

Installation

Package Contents

- USRobotics USB Internet Mini Phone
- Installation CD-ROM
- USB cable
- Quick Installation Guide

System Requirements

To use the USRobotics USB Internet Mini Phone and Skype™ Internet telephony service, your computer system and environment must meet the following minimum requirements:

- Windows® Vista, XP, or 2000
- 128 MB RAM
- 400 MHz processor speed
- High speed Internet connection
- USB 1.1 or USB 2.0 port
- CD-ROM drive
- 15 MB available disk space
- Skype software

Phone Features



USB
Cable

Skype



Displays Skype window on computer
Navigates Skype window tabs

Up/Down



Adjusts voice volume during calls
Scrolls through contacts and call history

Backspace



Press to delete entered digits
Press and hold to delete all digits
Press to select ring tone for phone

End



Closes Skype window
Ends calls

Send



Accepts and places calls
Puts active calls on hold
Makes calls on hold active

Mute



Enters * as a digit
Press and hold to mute/unmute phone microphone



—



Enter digits 1 - 9



Enter digit o
Press and hold to enter + prior to entering digits

Warning:


Skype is not a telephony replacement service. Any VoIP service used in conjunction with the USRobotics USB Internet Mini Phone cannot be used for calls to emergency services or emergency telephone numbers (311, 911, 112, 999, etc.). Use a land line for calls to emergency services, such as police, fire, or ambulance.

Installation Instructions

Step One: Install the phone

1. Clear your screen.

Balloons such as the one shown below may interfere with those that show the progress of your Internet Mini Phone installation.




Close any balloon in your system tray.

2. Connect the phone.
 - A. Insert the USB cord into the Internet Mini Phone. Make sure it clicks into place so that no metal on the connector is visible.




- B. Connect the other end of the USB cable to your computer's USB port.

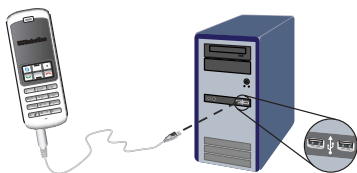

Wait for an indication that installation is complete. If you are prompted to reboot your computer, click **Yes**.

3. Insert the Installation CD-ROM.

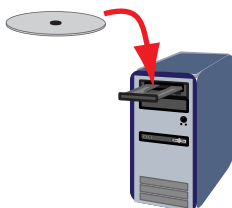

If the CD does not start automatically, start it manually as follows:

- **Windows Vista:** Click **Start > Computer**, then double click the CD drive icon.
- **Windows XP:** Click **Start > My Computer**, then double click the CD drive icon.
- **Windows 2000:** On the desktop, double click **My Computer**, then double click the CD drive icon.

Step Two: Install Skype

If Skype is already installed on your computer, go to go to “Step Three: Install the USRobotics USB Internet Mini Phone Software.”

1. If prompted, select your language and accept the End User License Agreement.
2. Select **Install Skype**.




3. Follow the on-screen instructions to install Skype.

Step Three: Install the USRobotics USB Internet Mini Phone Software

1. Select **Install** USRobotics USB Internet Mini Phone.




2. Follow the instructions to install the USRobotics USB Internet Mini Phone. When you see the screen below, select **Allow this program to use Skype**.

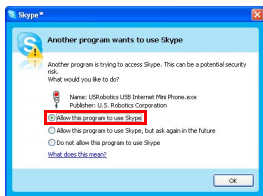

3. If multiple sound cards are installed on your computer, make sure that the correct sound card is selected as the Windows default device.

Windows Vista:

- A. Click Windows **Start** .
- B. Click **Control Panel**.
- C. Click **Hardware and Sound > Sound**.
- D. Select the Playback device and the Recording device that you want to use for your computer sounds.
- E. Select **Set Default**
- F. Click **OK** to close the Sound window.


Windows XP:

- A. Click Windows **Start**.
- B. Click **Control Panel**.
- C. Double click **Sounds and Audio Devices**.
- D. On the **Audio** tab, select the desired sound card as the Windows Sound playback and Sound recording Default device.
- E. Click **OK** to make the change and close the window.

Windows 2000:

- A. On the desktop, double click **My Computer**.

- B. Double click **Control Panel**.
 - C. Double click **Sounds and Multimedia**.
 - D. On the **Audio** tab, select the desired sound card as the Windows sound playback and sound recording preferred device.
 - E. Click **OK** to make the change and close the window.
4. Verify the installation by making a test call.
- A. Open the Skype window.
 - B. Select **Tools, Options**. Then select **Sound Devices**.
 - C. In the Skype - Options window, click **Make a test call to Skype answering machine** and follow the instructions.

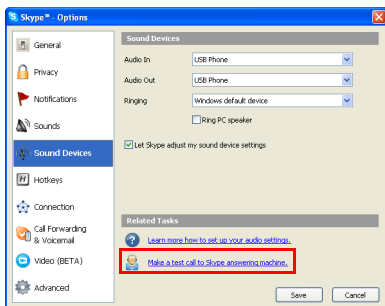

Note: Incoming calls ring on your Windows default sound device. If you prefer your Internet Mini Phone to ring instead of your Windows default sound device, see “Troubleshooting” in the *User Guide* on the USRobotics Installation CD-ROM.

Congratulations. You have successfully completed the installation procedure. Please register your USRobotics USB Internet Mini Phone at www.usr.com/productreg/.

Additional Information

For regulatory and warranty information, see the *User Guide* on the USRobotics Installation CD-ROM.

For operation and configuration information, see the *User Guide* on the USRobotics Installation CD-ROM.

For troubleshooting and technical support, see:

1. The *User Guide* on the USRobotics Installation CD-ROM.
2. The Support section of the USRobotics Web site at www.usr.com/support/.

Many of the most common difficulties that users experience have been addressed in the FAQ and Troubleshooting Web pages for your phone. The Support pages also contain current support contact information and documentation.

3. Skype: www.skype.com.
4. The E-mail a Support Technician web page at www.usr.com/emailsupport/

Model Number	Serial Number
9602	

