

USRobotics®

USB Internet Mini Phone



Quick Installation Guide Guide d'installation rapide

R24.0639.00
rev 1.1 3/07

Installation

Package Contents

- USRobotics USB Internet Mini Phone
- USB Cable
- Installation CD-ROM
- Installation Guide

System Requirements

To use the USRobotics USB Internet Mini Phone and Skype™ Internet telephony service, your computer system and environment must meet the following minimum requirements:

- Windows® Vista, XP, or 2000
- 400 MHz processor speed
- USB 1.1 or USB 2.0 port
- 15 MB available disk space
- 128 MB RAM
- High speed Internet connection
- CD-ROM drive
- Skype software

Phone Features



Skype



Displays Skype window on computer
Navigates Skype window tabs

Up/Down



Adjusts voice volume during calls



Scrolls through contacts and call history

Backspace



Press to delete entered digits

Press and hold to delete all digits

Press to select ring tone for phone

End



Closes Skype window

Ends calls

Send



Accepts and places calls

Puts active calls on hold

Makes calls on hold active

Mute



Enters * as a digit

Press and hold to mute/unmute phone microphone



Enter digits 1 - 9



Enter digit 0

Press and hold to enter + prior to entering digits


Warning:

Skype is not a telephony replacement service. Any VoIP service used in conjunction with the USRobotics USB Internet Mini Phone cannot be used for calls to emergency services or emergency telephone numbers (311, 911, 112, 999, etc.). Use a land line for calls to emergency services, such as police, fire, or ambulance.

Installation Instructions

1. Clear your screen.

Balloons such as the one shown below may interfere with those that show the progress of your Internet Mini Phone installation.



Close any balloon in your system tray.

2. Install the USRobotics USB Internet Mini Phone

- A. Insert the USB cord into the Internet Mini Phone. Make sure it clicks into place so that no metal on the connector is visible.




- B. Connect the other end of the USB cord to your computer's USB port.



Wait for an indication that installation is complete. If you are prompted to reboot your computer, click **Yes**.

3. **Insert the Installation CD-ROM.**

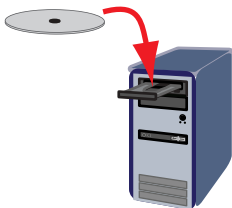

Note: If the CD does not start automatically, double click the CD drive icon:

Windows Vista: Click **Start > Computer**, then double click the CD drive icon.

Windows XP: Click **Start**, select **My Computer**, then double click the CD drive icon.

Windows 2000: Double click **My Computer** on the desktop then double click the CD drive icon.

4. Install Skype

If Skype is already installed on your computer, go to Step 5.

- A. If prompted, select your language and accept the End User License Agreement.
- B. Select **Install Skype**.




- C. Follow the instructions to install Skype.

5. Install the USRobotics USB Internet Mini Phone Software

- A. Select **Install USRobotics USB Internet Mini Phone**.



- B. Follow the instructions to install the USRobotics USB Internet Mini Phone. When you see the screen below, select **Allow this program to use Skype**.

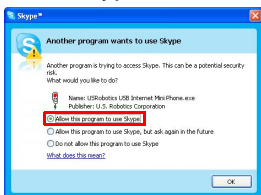

- C. If multiple sound cards are installed on your computer, make sure that the correct sound card is selected as the Windows default device:

Windows Vista: Click Windows **Start**  .

Click **Control Panel**.

Click **Hardware and Sound > Sound**.

Select the Playback device and the Recording device that you want to use for your computer sounds.

Select **Set Default**.

Click **OK** to close the Sound window.


Windows XP: Click **Start**, select **Control Panel**, then double click **Sounds and Audio Devices**.

Click **Audio** and select the desired sound card as the Windows Sound playback and Sound recording Default device.

Windows 2000: Double click **My Computer** on the desktop, double click **Control Panel**, then double click **Sounds and Multimedia**.

Click **Audio** and select the desired sound card as the Windows Sound Playback and Sound Recording Preferred device.

6. **Verify the installation by making a test call.**
- Open the Skype window.
 - Select **Tools, Options**. Then select **Sound Devices**.
 - In the Skype - Options window, click **Make a test call to Skype answering machine** and follow the instructions.

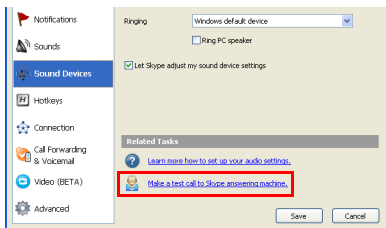

Note: Incoming calls ring your Windows default sound device. If you prefer your Internet Mini Phone to ring instead of your Windows default sound device, refer to the Operation section.

Congratulations. You have successfully completed the installation procedure. Please register your USRobotics USB Internet Mini Phone at www.usr.com/productreg/.

Additional Information

- **For regulatory and warranty information**, see the *User Guide* on the Installation CD-ROM.
- **For troubleshooting, operation, and configuration information**, see:
 - The *User Guide* on the Installation CD-ROM
 - The USRobotics technical support website: www.usr.com/support/
 - The Support contact information on the last page of this guide.

Installation

Contenu de la boîte

- USRobotics USB Internet Mini Phone
- Câble USB
- CD-ROM d'installation
- Guide d'installation

Configuration requise

Pour utiliser l'USRobotics USB Internet Mini Phone et le service de téléphonie via Internet Skype™, la configuration minimum requise de vos système et environnement informatiques doit être la suivante :

- Windows® Vista, XP, ou 2000
- Vitesse du processeur de 400 MHz
- Port USB 1.1 ou USB 2.0
- 15 Mo d'espace disque disponible
- 128 Mo de RAM
- Connexion Internet haut débit
- Lecteur CD-ROM
- Logiciel Skype

Caractéristiques du téléphone



Câble
USB

Skype



Affiche la fenêtre Skype sur l'ordinateur

Navigue dans les onglets de la fenêtre Skype

Haut/Bas



Règle le volume de la voix pendant les appels



Parcourt les contacts et l'historique des appels

Retour arrière



Appuyez sur cette touche pour supprimer les chiffres entrés

Maintenez cette touche enfoncée pour supprimer tous les chiffres

Appuyez sur cette touche pour sélectionner la sonnerie du téléphone

Fin



Ferme la fenêtre Skype
Met fin aux appels

Décrocher



Reçoit et passe des appels

Met les appels actifs en attente

Rend actifs les appels en attente

Secret



Entre le caractère *

Maintenez cette touche enfoncée pour désactiver/activer le micro du téléphone



–



Entrent les chiffres 1 - 9



Entre le chiffre 0

Maintenez cette touche enfoncée pour entrer + avant de saisir des chiffres

